

# TECHNICAL SPECIFICATIONS


## DUAL PATIENT STATION

HM-DPS/2GA


*Individual Call Placement Indicators*  
*Individual Call Reset Buttons*  
*Cordset Removal Triggers Call Placement*  
*Standard Cordset Receptacles*  
*UL Listed*



Front

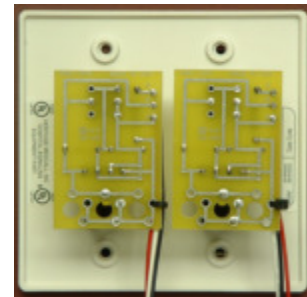

Rear

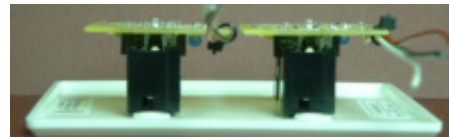

Side

### DESCRIPTION

Wall recessed or surface mounted dual patient station with individual cordset receptacles and call indicators for use with remote call origination cordset. Removal of either cordset originates a call placement.

### RECEPTACLES

Two cordset receptacles wired to accept 1/4" cordsets (normal call, geriatric, explosion proof) with nurse call origination facility.

### CONTROLS AND INDICATORS

Two combination white call placement indicators and call cancel buttons.

### INSTALLATION

Color-coded, prewired terminations provided. Mount using only the four 6-32 x 1" nylon screws provided.

### HOUSING AND FINISH

**Faceplate:** Flame retardant ABS plastic rated 94V-O by UL, finished in off-white supplied with nylon mounting screws.

**W42 Backbox:** metal backbox supplied by others.

### DIMENSIONS

**Faceplate:** 4-9/16" (11.59cm) wide x 4-1/2" (11.43cm) high.

**W41 Backbox:** 4-11/16" (11.91cm) square electrical box with two-gang adapter for a total depth of 3-5/16" (8.41cm), supplied by others.

### LISTINGS

The HM-DPS/2GA is UL and CUL listed Hospital Signaling Equipment / Nurse Call Equipment under File E157381.

### Heritage Medcall, Inc.

202 East Virginia Avenue, Tampa, FL 33603  
813-221-1000 (voice), 813-223-1405 (fax)  
www.heritagemedcall.com

01/04 HM-DPS/2GA  
Issue C  
Printed in U.S.A.

---

## ARCHITECTS' AND ENGINEERS' SPECIFICATIONS

### MODEL HM-DPS/2GA DUAL PATIENT STATION

The wall recessed or surface mounted dual patient station shall be for use with two remote call origination cordsets.

The patient station shall be provided with two white combination call placement indicators and call cancel buttons. Two receptacles shall be provided to accept two 1/4" type cordsets. A call shall be originated if either cordset is removed from the receptacles.

The unit shall be provided with color-coded prewired terminations for ease of installation. Faceplate shall be flame retardant ABS plastic rated 94V-O by UL, finished in off-white. Nylon screws shall be provided to mount the faceplate.

The unit shall be UL and CUL listed Hospital Signaling Equipment / Nurse Call Equipment under File E157381.

The faceplate shall be finished in off-white. The W42 backbox shall be supplied by others. The dimensions shall be: **Faceplate:** 4-9/16" (11.59cm) wide x 4-1/2" (11.43cm) high, **W42 backbox:** 4-11/16" (11.91cm) square electrical box with two-gang adapter for total depth of 3-5/16" (8.41cm), supplied by others.