



*Visual/Audio Patient Call Indication
Interrupted Tone Signal for Emergency Call
Differentiation of Type of Call Placed
UL Listed*



Front

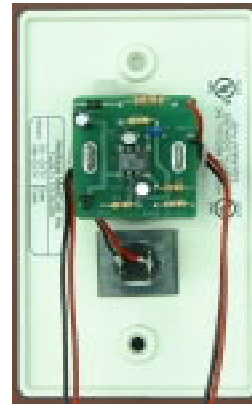

Rear

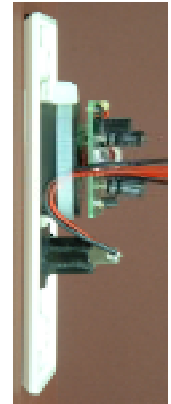

Side

DESCRIPTION

Wall recessed or surface mounted duty station provides visual and audible indication of normal and emergency calls placed.

CONTROLS AND INDICATORS

One white call indicator. Tone signals announce incoming calls. Repeating tone signals announce unanswered calls. Interrupted tone signals indicate emergency calls.

CIRCUITRY

Solid state circuitry; long-life indicator lamps and front adjustable tone module for volume adjustment.

LISTINGS

The HM-DUTY is UL and CUL listed Hospital Signaling Equipment / Nurse Call Equipment under File E157381.

INSTALLATION

Color-coded prewired terminations provided. Mount using only the two 6-32 x 1" nylon screws provided

HOUSING AND FINISH

Faceplate: Flame retardant ABS plastic rated 94V-O by UL, finished in off-white and supplied with nylon mounting screws.

W41 Backbox: metal backbox supplied by others.

DIMENSIONS

Faceplate: 2-3/4" (6.99cm) wide x 4-1/2" (11.43cm) high.

W41 Backbox: 4-11/16" (11.91cm) square electrical backbox with one-gang adapter for a total depth of 2-7/8" (7.30cm), supplied by others.

Heritage Medcall, Inc.

202 East Virginia Avenue, Tampa, FL 33603
813-221-1000 (voice), 813-223-1405 (fax)
www.heritagemedcall.com

ARCHITECTS' AND ENGINEERS' SPECIFICATIONS

MODEL HM-DUTY DUTY STATION

The wall recessed or surface mounted duty station shall provide visual and audible indication of normal and emergency calls placed.

Tone signals shall announce incoming calls. Repeating tone signals shall announce unanswered calls. Interrupted tone signals shall indicate emergency calls.

The unit shall be provided with one white call indicator and adjustable tone module for tone volume adjustment. To insure long life and reliability, solid state signal circuitry with long-life indicator lamps shall be used.

The unit shall be UL and CUL listed Hospital Signaling Equipment / Nurse Call Equipment under File E157381.

The unit shall be provided with color-coded prewired terminations for ease of installation. The faceplate shall be flame retardant ABS plastic rated 94V-O by UL, finished in off-white. Nylon screws shall be provided to mount the faceplate.

The faceplate shall be finished in off-white. The W41 backbox shall be supplied by others. The dimensions shall be: **Faceplate:** 2-3/4" (6.99cm) wide x 4-1/2" (11.43cm) high, **W41 backbox:** 4-11/16" (11.91cm) square electrical box with one-gang adapter for total depth of 2-7/8" (7.30cm), supplied by others.