


*Illuminated Pushbutton
Silk-Screened Labeled Emergency
Connections via Prewired Connector*

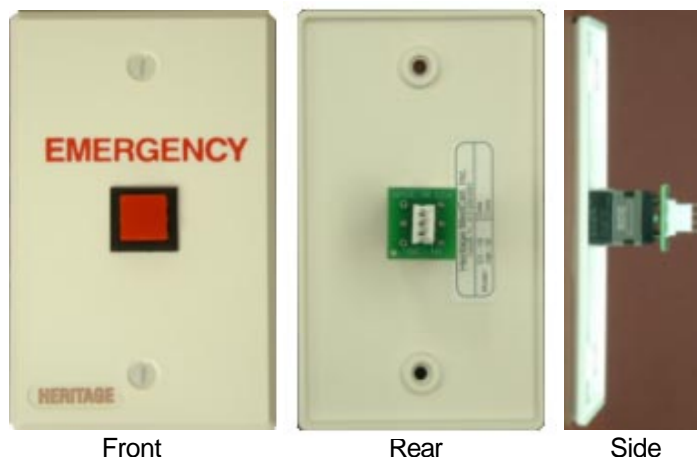

DESCRIPTION

Wall recessed or surface mounted one button switch panel with silk-screened Emergency Label. Latching switch.

CONTROLS AND INDICATORS

One combination pushbutton and lamp indicator. Standard lens color is red, others available separately include white, amber, green, blue, yellow, clear, and black. Custom laminated labels are available for lenses. Lamps are front replaceable with rated average life of 6000 hours.

SWITCH

Switch is normally-open, single-pole / single throw. HM-1B/K2 (EMERGENCY) is latching (push-on / push-off). All switches are rated 1A / 125 VAC.

INSTALLATION

Plugs into prewired connectors. HM-ESC requires one HM-4P. Mount using only the two 6-32 x 1" nylon screws provided.

HOUSING AND FINISH

Faceplate: Flame retardant ABS plastic rated 94V-O by UL, finished in off-white and supplied with nylon mounting screws.

DIMENSIONS

Faceplate: 2-3/4" (6.99cm) wide x 4-1/2" (11.43cm) high; **W41 Backbox:** 4-11/16" (11.91cm) square electrical backbox with one gang adapter for total depth of 2-7/8" (7.30cm), supplied by others.

LISTINGS

The HM-1B/K2 (EMERGENCY) is UL and CUL listed Hospital Signaling Equipment / Nurse Call Equipment under File E157381.

Heritage Medcall, Inc.

202 East Virginia Avenue, Tampa, FL 33603
813-221-1000 (voice), 813-223-1405 (fax)
www.heritagemedcall.com

Architects' and Engineers' Specifications

Model HM-1B/K2 (EMERGENCY) Emergency Call Switch

The wall recessed or surface mounted HM-1B/K2 (EMERGENCY) Emergency Call Switch shall be available for use as a system feature input device as well as a status indicator.

Feature Input Device - As a system feature input device, the push button shall be used for feature activation.

Status Indication - To provide status indication, the lamp indicator shall illuminate to show feature activation and/or overall system status.

The HM-1B/K2 (EMERGENCY) shall be silk-screened labeled with the words "EMERGENCY CALL" in bold red lettering.

The button panel shall be provided with one combination pushbutton and lamp indicator. Lens colors shall be available (separately). Lamps shall be front replaceable with rated average life of 6000 hours.

The HM-1B/K2 (EMERGENCY) shall be UL and CUL listed Hospital Signaling Equipment / Nurse Call Equipment under File E157381.

The HM-1B/K2 (EMERGENCY) shall contain one latching normally-open SPST switches.

The faceplate shall be flame retardant ABS plastic rated 94V-O by UL, finished in off-white. For ease of installation, the button panel shall plug into pre-wired connectors.

Faceplate shall mount to backbox with two 6-32 x 1" nylon screws provided.

Button panel shall install into a two gang box with single gang adapter for surface or wall flush mounting. The dimensions shall be: **Faceplate** - 2-3/4" (6.99cm) wide x 4-1/2" (11.43cm) high; **W41 backbox** - 4-11/16" (11.91cm) square electrical backbox with one gang adapter for total depth of 2-7/8" (7.30cm), supplied by others.