


Controls Three Separate Zone Dome Lights

Responds to All Normal Calls in Zone

Responds to All Emergency Calls In Zone

Solid State Circuitry

Mounts on Standard Two-Gang Backbox

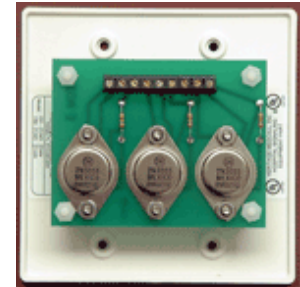

DESCRIPTION

Surface or flush mounted zone light control for use in conjunction with three zone lamps. Used in locations where the nurse control station and/or annunciator panel and specific care lights are not visible to alert the nursing personnel of calls placed by patients. Normal calls are indicated by steady illumination of a lamp. Emergency calls are indicated by flashing lamp.

REQUIREMENTS

One zone light control and three dome lights required for every three zones in the system.

CIRCUITRY

Solid state devices mounted on an epoxy glass printed circuit board.

INSTALLATION

Miniature terminal block with screw terminals and barriers.

HOUSING AND FINISH

Faceplate: Flame retardant ABS plastic rated 94VV-O by UL, finished in off-white.

W42 Backbox: Metal backbox supplied by others.

DIMENSIONS

Faceplate: 4-9/16" (11.59cm) wide x 4-1/2" (11.43cm) high; **W42 Backbox:** 4-11/16" (11.91cm) square electrical backbox with two gang adapter for total depth of 3-5/16" (8.41cm), supplied by others.

LISTINGS

The HM-ZCM3 is UL and CUL listed Hospital Signaling Equipment / Nurse Call Equipment under File E157381.

Heritage MedCall, Inc.

202 East Virginia Avenue, Tampa, FL 33603
813-221-1000 (voice), 813-223-1405 (fax)
www.heritagemedcall.com

ARCHITECTS' AND ENGINEERS' SPECIFICATIONS

MODEL HM-ZCM3 ZONE CONTROL MODULE

The wall recessed or surface mounted zone light control shall be used in conjunction with three zone lamps in locations where the nurse control station and/or annunciator panel and specific care lights are not visible to alert nursing personnel of calls placed by patients. Normal calls shall be indicated by steady illumination of a lamp. Emergency calls shall be indicated by flashing lamp.

The HM-ZCM3 shall be UL and CUL listed Hospital Signaling Equipment / Nurse Call Equipment under File E157381.

The HM-ZCM3 Zone Control Module and three zone lamps shall be required for every three zones in the system. For reliability, solid state devices and epoxy glass printed circuit board shall be used. For ease of installation and maintenance, miniature terminal block and screw terminals with barriers shall be provided.

The HM-ZCM3 faceplate shall be flame retardant ABS plastic rated 94V-O by UL, finished in off-white.

The dimensions shall be: **Faceplate:** 4-9/16" (11.59cm) wide x 4-1/2" (11.43cm) high; **W42 Backbox:** 4-11/16" (11.91cm) square electrical backbox with two gang adapter for total depth of 3-5/16" (8.41cm), supplied by others.